

HOW TO USE SANNAN SOFTWARE (23 年 6 月确认新的版本))



1. (LED station V 5.1 setup,zip)

this is first software.Used for our panel wiring connections. so we you received this one ,Install the software.you can follow this video([SANNAN Software video LED Station2018](#))

2.([SanNan-New module file.zip](#))

Since the dynamic panel series of our company is constantly upgrading, there may be modules on our source software, so for your better use, you can add modules in ([LED Station V 5.1 Setup, ZIP](#)). For specific operations, you can refer to the video tutorial.([SanNan-How to add video to module \(E\)](#))

3.(LED TO LDX)

V3.1



P20A-12V/1-8-Point x14Panel

P20B-5V/1-2-Point x 3K LED

P30C-5V/1-2-Point x 3K LED

P40D-12V/1-2-Point x 3K LED

P7.5/USB-1-2-Point x2Panel

Single product/usb 1-2-pointX3K LED

V3.52



P20B-5V/4-8-Point x 3K LED

P30C-12V/4-8-Point x 3K LED

P40-12V/4-8-Point x 3K LED

P30C-5V/4-8-Point x 3K LED

P30-RGB-5V-light bar/4-8-Point x 1K LED

V3.8



P16-RGB-/1-8-Point x 8 Panel/One point

P20-RGB-/1-8-Point x8 Panel/One point

P25 RGB+W/1-8-Point x 26 Panel/One point

P30 RGB+W/1-8-Point x 26 Panel/One point

P7.5-/1-8--Point x 4 Panel/One point

P10-F/1-8Point x10 Panel/One point

This software is the controller program
outgoing software,